D-Rings on each side for detachable shoulder strap.

Pinch clasp to secure the front flap.

Expandable to add 2 inches at the base.









Rubber "feet" at the bottom aid in stability when setting your case down.



Attachable Water-resistant cover with storage pouch included.





Top-slit quick access zippered portal let's you get at your equipment without opening the main case flap.







Zippered rear slot for papers or plane tickets and padded front pocket for a pad computer.



Rear pass-though slot on the back of the case to attach to retractable luggage roller handles.





Padded interior slot for an iPad® or tablet.



Interior is Hi-Vis™ Yellow making it easy to see and find dark

equipment inside.

Main cavity's camera compartment is adjustable and completely removable. Accommodates DSLR with attached lens, an accessory flash, plus two or three additional lenses and accessories.



